



USER MANUAL

Grease Pump for Outboard Motors

Set includes:

- Grease pump
- Aluminum adapter compatible with Mercury, Mariner, Johnson, and Evinrude engines

Purpose:

The pump is designed for precise grease application in service points of outboard engines, especially in the lower unit. Direct mounting onto a standard grease container makes work easier and reduces the risk of spills.

Assembly and Use Instructions:

1. Preparing the pump:
 - Ensure that the grease container has a compatible thread.
 - Check if the aluminum adapter is properly attached to the pump.
2. Mounting the pump onto the container:
 - Screw the pump directly onto the open grease container.
 - Tighten manually, ensuring a secure connection.
3. Preparing the grease point:
 - Clean the area where grease will be applied.
4. Greasing:
 - Insert the aluminum adapter into the service fitting.
 - Pump manually until grease starts to emerge.
 - Avoid excessive greasing.
5. After use:
 - Disconnect the pump from the fitting.
 - Clean the nozzle and the container.

Pump Maintenance:

After use, wipe the pump and adapter with a clean cloth.
Store the device in a dry place.
Regularly check the condition of threads and seals.

Warnings:

- Use the pump only for grease.
- Do not use with other liquids or chemicals.
- Ensure the engine is off and cool before working.
- Keep the device out of reach of children.

Warranty:

The product is covered by a 2-year manufacturer's warranty.

Details can be found in the warranty card or on the manufacturer's website.